# 3 Position Cylinder

# Series RZQ


Ø32, Ø40, Ø50, Ø63

# **Provides intermediate** stop mechanism



# 1 A port pressurization at initial (retracted) position. First-stage stroke 2 First-stage extension by pressurizing A and C ports and intermediate stop. Full stroke 3 Entire stroke extension by pressurizing

## 2-stage stroke enabled with a small increase in length

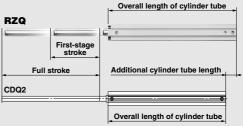

#### Comparison of cylinder tube overall length (mm)

Full stroke = 300 mm (150 + 150 = 300 mm in case of CG1BN)

Bore size (mm)	RZQA□- 300-150	CDQ2A□- 300D	RZQ-CDQ2 Additional cylinder tube length	CG1BN□- 150+150-XC11 Dual stroke cylinder		
32	382.5	345.5	37	591		
40	392	355	37	606		
50	396.5	355.5	41	631		
63	402	357.5	44.5	631		

- ◆ First-stage stroke can be specified without changing the overall length.
- ◆ ±0.02 mm or less repeatability in intermediate stop positioning

High accuracy is achieved by an intermediate stop method of pressing metallic components against each

 First-stage stroke can be freely specified. Full stroke: Available in 25 mm increments, 1 mm

increments with a spacer First-stage stroke: Available in 1 mm increments

Wide variations in mounting

Direct mounting: Mounting taps of the same dimensions as those of Series CQ2.

Through holes are also available for full strokes of 75 mm or less.

Static mounting: Foot style, Rod side flange style Rotation bracket: Double clevis

D-□

REA REB

REC

C

|C□X

MQ

RHC

RZO



A. B and C ports.

-X□



# Series RZQ **Specific Product Precautions**

Be sure to read before handling.

Refer to front matter 39 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

#### Operation

## **⚠** Caution

1. When cylinders are moved from the retraction end to the extension end or from the extension end to the retraction end, they must stop in an intermediate position, even for a moment, and then move to the stroke end.

If the cylinders are moved from the retraction end to the extension end or vice versa without stopping in the intermediate position, the operation of piston B will become unstable and the occurrence of abrasion may be accelerated due to contact with other parts.


#### Selection

## **∕** Caution

1. Keep the relation between the load mass and the maximum speed below the limit lines in Graph (1). If it exceeds the limit line, receive the load with an external

Operation beyond the limiting lines will cause damage to machinery.

Graph (1)

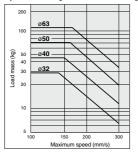

2. Use the cylinder in applications in which the overrun will not cause any problem.

When stopping at an intermediate point, this cylinder first moves the piston past the intermediate point and then returns it. Confirm this distance of an extra travel (overrun) in Graph 3 on page 1360 and use the cylinder in applications in which the overrun will not cause any problem

3. In cases where a positioning repeatability of 0.1 mm or less is required at the retraction and extension ends, use an external stopper for stops.

Use of an internal stopper will result in approximately 0.1 mm of displacement due to changes in the operating pressure and external forces

4. Use an external guide to receive a moment or torque which can generate a load.


If a moment or torque directly acts on the cylinder, it will lead to reduced service life or damage to machinery.

5. To connect a direct acting guide, use floating joints in the following table.

If the direct acting guide is directly connected in operation, it may lead to malfunction or reduced service life.

Model	Applicable floating joint
RZQ□32	JB40-8-125
RZQ□40/50	JB63-10-150
RZQ□63	JB80-16-200

#### Selection

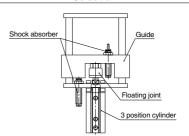

6. When the kinetic energy of a load (non-moving parts and moving parts) exceeds the allowable kinetic energy in table 3, it also exceeds the cushioning capacity of the rubber bumper. Add a cushioning mechanism such as a shock absorber shown in the figure above.

Table 3

Bore size (mm)	Allowable kinetic energy (J)
32	0.29
40	0.52
50	0.91
63	1.54

The kinetic energy of a load can be found with the following formula.

$$\mathsf{E} = \frac{\mathsf{M} + \mathsf{m}}{2} \, \mathsf{V}^2$$

E = Kinetic energy (J)

M = Weight of non-moving part (kg)

m = Weight of moving part (kg)

v = Piston speed (m/s)

PZO Moving Part Weight

#### Model Selection

nzu	IVIOVIII	noving Fait Weight									
Bore size	9	Cylinder stroke									
(mm)	25-5	50-5	75-5	100-5	125-5	150-5	175-5	200-5	250-5	300-5	
32	0.18	0.21	0.23	0.26	0.29	0.32	0.34	0.37	0.43	0.48	
40	0.31	0.35	0.39	0.43	0.46	0.50	0.54	0.58	0.66	0.74	
50	0.58	0.63	0.68	0.73	0.78	0.83	0.88	0.93	1.03	1.13	
63	0.73	0.80	0.86	0.93	0.99	1.06	1.12	1.19	1.33	1.45	

<sup>\*</sup> Find the first-stage stroke by adding the weight of an additional 10 mm as in the table below.

Additional Weight				Unit (g	J)
Cylinder bore size (mm)	ø <b>32</b>	ø <b>40</b>	ø <b>50</b>	ø <b>63</b>	Ī
First-stage stroke additional 10 mm	3	3	6	15	Ī

#### Maintenance

## **⚠** Caution

1. If reapplication of grease is needed, apply grease specifically provided for this purpose:

Grease: Product name: Grease pack

Part no.: 10 g GR-L-010

150 g GR-L-150


2. When dynamic seals are replaced, use a seal kit provided for each bore size.

Dedicated seal kit: Refer to "Construction" on page 1361.

# 3 Position Cylinder Series RZQ

Ø32, Ø40, Ø50, Ø63

#### How to Order

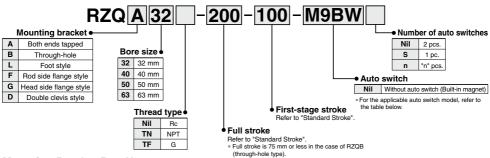

#### Mounting Bracket Part No.

Bore size (mm)	Foot Note 1)	Flange	Double clevis Note 2)
32	RZQ-L032	RZQ-F032	RZQ-D032
40	RZQ-L040	RZQ-F040	RZQ-D040
50	RZQ-L050	RZQ-F050	RZQ-D050
63	RZQ-L063	RZQ-F063	RZQ-D063

Note 1) When ordering foot brackets, order two pieces per cylinder.

Note 2) The following parts are included with each mounting bracket.

Foot, Flange/Body mounting bolts

Double clevis/Clevis pins, type C retaining ring for axis, Body mounting bolts

Applicable Auto Switches/Refer to pages 1893 to 2007 for detailed auto switch specifications.

			ight		L	oad volta	ige	Auto swit	ch model	Lea	d wir	e ler	ngth	(m)		Applicable load		
Туре	Special function	Electrical entry	Indicator light	Wiring (output)	С	С	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	None (N)	Pre-wired connector			
				3-wire (NPN) 3-wire (PNP)		5 V,		VN6W	M9N	•	•	•	0	-	0	IC circuit		
		Grommet			ļ	12 V		M9PV	M9P	•	•	•	0	-	0	ic circuit		
switch				2-wire		12 V		M9BV	M9B	•	•	•	0	-	0			
\ <del>.</del>		Connector		2-wire		12 V		J79C	_	•	_	•	•	•	_			
0	B			3-wire (NPN)		5 V,		M9NWV	M9NW	•	•	•	0	<u> </u>	0	IC circuit		
anto	Diagnostic indication (2-color indication)		Yes	3-wire (PNP)	24V	241/	12 V		M9PWV	M9PW	•	•	•	0	-	0	io circuit	Relay,
state			1163	2-wire	Z4 V	12 V	_	M9BWV	M9BW	•	•	•	0	<u>  - </u>	0	_	PLC	
\$	Water resistant (2-color indication)	Grommet		3-wire (NPN)		5 V,		M9NAV**	M9NA**	0	0	•	0	-	0	IC circuit		
Solid		Grommet		3-wire (PNP)		12 V		M9PAV**	M9PA**	0		•	0	-	0	io circuit		
Š				2-wire		12 V		M9BAV**	M9BA**	0	0	•	0	<u>  - </u>	0	_		
	With diagnostic output (2-color indication)			4-wire		ĺ	5 V, 12 V		_	F79F	•	-	•	0	-	0	IC circuit	
	Magnetic field resistant (2-color indication)			2-wire (Non-polar)		_		_	P4DW	_	_	•	•	-	0	_		
switch			Yes	3-wire (NPN Equiv.)	_	5 V	_	A96V	A96	•	-	•	_	-	_	IC circuit	_	
<u> </u>		Grommet	100			_	200 V	A72	A72H	•	-	•	-	—	_			
0.0						12 V	100 V	A93V	A93	•	-	•	•	-	_	1 -		
art			No	2-wire		5 V, 12 V	100 V or less	A90V	A90	•	-	•	-	-	_	IC circuit	Relay,	
Reed auto		Connector	Yes	5	24V	12 V	_	A73C	_	•	_	•	•	•	_	_	PLC	
8	C	COMPECIO	No			5 V, 12 V	24 V or less	A80C	_	•	三	•	•	•	_	IC circuit		
	Diagnostic indication (2-color indication)	Grommet	Yes			-	_	A79W	_	•	-	•	-	1-	_	_		

\*\* Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance Consult with SMC regarding water resistant types with the above model numbers.

\* Lead wire length symbols: 0.5 m ..... Nil (Example) M9NW

(Example) M9NWL

(Example) M9NWM 1 m ..... M

5 m ..... Z (Example) M9NWZ None ....... N (Example) J79CN

- \* Auto switches marked with a "O" symbol are produced upon receipt of order. D-P4DW is available in sizes ø40 to ø63.
- \* Only D-P4DW type is assembled at the time of shipment.
- \* In addition to the models in the above table, there are some other auto switches that are applicable. For more information, refer to page 1366. \* Refer to pages 1960 and 1961 for the details of auto switches with a pre-wired connector.
- \* When D-A9\(\tilde{V}\)/M9\(\tilde{V}\)/M9\(\tilde{V}\)/M9\(\tilde{V}\)/M9\(\tilde{V}\)/M9\(\tilde{V}\), types with \(\tilde{9}\)2 to \(\tilde{9}\)5 are mounted on a side other than the port side, order auto switch mounting brackets separately. Refer to page 1366 for details.



D-□ -X□

REA REB REC C $\square$ Y |C□X MQ RHC RZ0



#### **Specifications**

Bore size (mm)	32	40	50	63					
Action		Double actin	g, Single rod						
Fluid		Α	ir						
Proof pressure	1.5 MPa								
Maximum operating pressure	1.0 MPa								
Minimum operating pressure	0.1 MPa Note 1)								
Ambient and fluid temperature	-10 to 60°C (with no freezing)								
Lubrication		Non-	lube						
Operating piston speed		50 to 30	0 mm/s						
Stroke length tolerance		+1	.5						
Stroke length tolerance		(	)						
Cushion		Rubber bu	mper Note 2)						
Port size (Rc, NPT, G) 1/8 1/4									

Note 1) When the pressure in A, B and C ports is the same

Note 2) First-stage stroke end (stopping in a intermediate position) without a rubber bumper

#### Standard Stroke

Full stroke Note 1)	25, 50, 75, 100, 125, 150, 175, 200, 250, 300
First-stage stroke Note 2)	5 mm to "Full stroke" -1 mm

Note 1) RZQB (through hole type) is only available for full strokes 25, 50 and 75.

Note 2) Available in 1 mm increments.

Note 3) Be aware of the minimum auto switch mounting stroke (Refer to page 1364).


#### Manufacture of Intermediate Stroke

Method	Spacers installed in standard stroke body.  (Intermediate strokes are compatible with a full stroke only.)				
Ordering	Refer to standard part number and ordering on page 1355.				
How to manufacture	Strokes are available in 1 mm increments by installing spacers				
now to manufacture	in standard stroke cylinders.				
Minimum stroke	5 mm				
	Part no.: RZQA50-135-50				
Example	A 15 mm spacer is installed in a standard cylinder				
	RZQA50-150-50. The B dimension is 246.5 mm.				

#### **How to Order Strokes**

#### RZQA32-150-78

First-stage stroke

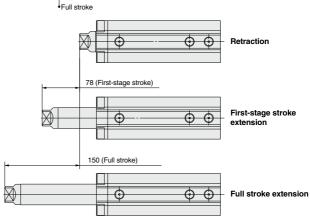

<sup>\*</sup> Consult with SMC for the special tube for intermediate strokes of a full stroke.



# 3 Position Cylinder $Series\ RZQ$

#### **Theoretical Output**


Ine	eoretica	ıı Outp	ut <u>lab</u>	ie i												[N]	
		Di-4				Air pressure [MPa] (with same air pressure applied to each port)											
Bor	e	Piston area [mm²]				First stage (Retraction end ← Intermediate stop position)						Second stage (Intermediate stop position ← Extension end)					
size (mm)		Piston A Piston B				Extension Retraction Exte			Extension	1	F	Retraction	1				
(mn	Front sid	e Rear side	Front side	Rear side ④*	0.3	0.5	0.7	0.3	0.5	0.7	0.3	0.5	0.7	0.3	0.5	0.7	
32	410	804	792	792	118	197	276	123	205	287	118	197	276	119	199	279	
40	641	1257	1244	1244	185	308	431	192	321	449	185	308	431	188	314	440	
50	1001	1963	1935	1935	289	481	673	300	501	701	289	481	673	292	487	681	
63	1527	3117	3067	3067	477	795	1113	458	764	1069	477	795	1113	443	739	1034	

#### **Theoretical Output**


Action	First stage (Re	etraction end +	→ Intermediate stop position)	Second stage (Intermediate stop position ← Extension end)						
Action	Exter	nsion	Retraction	Extension			Retraction			
Pressure port	A C		Α	Α	В	С	Α	С		
Air pressure [MPa]	Pa	Pc	PA	PA	Рв*	Pc*	Pa	Pc		
Formula for theoretical output F[N]	F = -1 x Pa + 2 x Pc		F = 1) x PA	F = -(1) x Pa + (4) x Pb + (2) - (3) x Pc			F = 1) x Pa + (3 - 2) x Pc			

<sup>\*</sup> ①, ② and ③ are piston areas. (Refer to Table 1).)


\* Assume PB ≤ Pc.

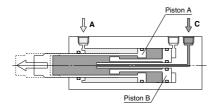


First-stage extension

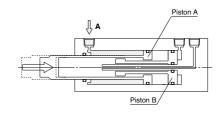

First-stage retraction

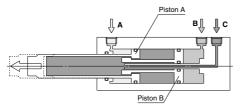

Second-stage extension

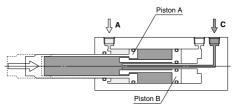

Second-stage retraction

REA REB REC

|C□Y

C□X MQ

RHC RZQ

D-□ -X□



#### Weight

#### **Weight Table**

Unit (kg)

Bore size					Cylinde	er stroke				
(mm)	25-5	50-5	75-5	100-5	125-5	150-5	175-5	200-5	250-5	300-5
32	0.81	0.88	0.94	1.01	1.07	1.13	1.20	1.26	1.39	1.52
40	1.19	1.27 1.35		1.43	1.50	1.58	1.66	1.73	1.89	2.04
50	1.80	1.92	2.04	2.16	2.28	2.40	2.52	2.64	2.89	3.13
63	2.53	2.71	2.87	3.04	3.20	3.36	3.53	3.69	4.02	4.35

Note) Calculate the first-stage stroke referring to the values for "10 mm increase" in the Additional Weight Table 2 below.

Additional Weight Table 2

Unit (g)

Item	Model	Bore size (mm)								
item	iviodei	32	40	50	63					
10 mm increase of first-stage stroke	RZQ□	3	3	6	15					
Foot style (including bolts)	RZQL	143	155	243	324					
Flange style (including bolts)	RZQG, RZQF	165	198	348	534					
Double clevis style (including bolts, pins and retaining ring)	RZQD	151	196	393	554					

Note) Add the Weight in Table 2 to those in Weight Table.

### **RZQB Mounting Bolt**


Mounting / Mounting bolts for the through hole type RZQB are available.

Refer to the following for ordering procedures.

Order the actual number of bolts that will be used.

#### Example) CQ-M5 x 110L 2 pcs.



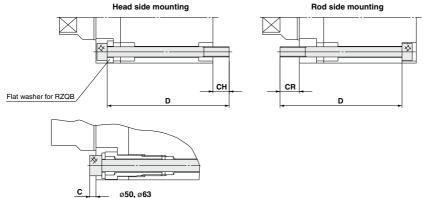

Note) Use the attached washer when inserting the bolt from the rod side.


#### **RZQB Mounting Bolt**

Cylinder model	СН	CR	С	D	Mounting bolt part no.	No. of bolts	Attached flat washer part no.		
RZQB32-25-□				110	CQ-M5 x 110L				
RZQB32-50-□	8	9.5	-	135	x 135L				
RZQB32-75-□				160	x 160L	0	D7000 10 C7515		
RZQB40-25-□				120	CQ-M5 x 120L	2 pcs.	RZQ32-12-S7515		
RZQB40-50-□	8.5	10	_	145	x 145L				
RZQB40-75-□				170	x 170L				
RZQB50-25-□				130	CQ-M6 x 130L		JIS flat washer		
RZQB50-50-□	11.5	16.5	3	155	x 155L				
RZQB50-75-□				180	x 180L	4	Nominal size 6		
RZQB63-25-□				135	CQ-M8 x 135L	4 pcs.	JIS flat washer		
RZQB63-50-□	12.5	17.5	3.5	160	x 160L				
RZQB63-75-□				185	x 185L		Nominal size 8		

#### **Model Selection**


#### Selection chart for pneumatic circuit and selection graph


Select the pneumatic circuit and selection graph according to the following chart.

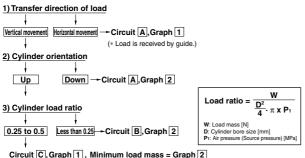

#### Selection graph

The optimum size is determined from the intersection of the operating pressure and load mass.

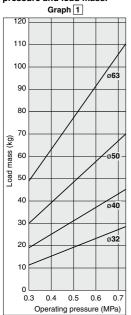

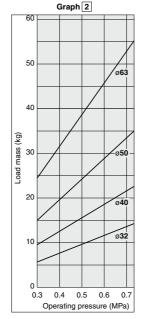


#### Selection example


Selection conditions: Transfer direction: Vertical movement Cylinder orientation: Down

> Load mass: 15 kg Operating pressure: 0.4 MPa

→ Circuit A and Graph 2 are selected according to the chart. Find the intersection of an operation pressure of 0.4 MPa and load mass of 15 kg in Graph 2.  $\rightarrow$  ø50 is selected.


#### Pneumatic circuit

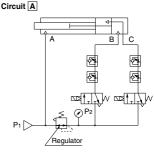

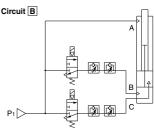

Power valve: Precision regulator, etc.

Circuit C

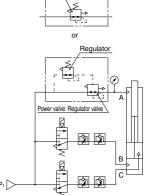

\* When adjusting the air pressure in A port, use a large exhaust capacity regulator such as a power valve (a regulator valve or precision regulator). Cylinder speed decreases when exhaust capacity is not sufficient.

If A port is open when the cylinder is extended, the operation of piston B may become unstable due to drastic pressure change. Pressure must be constantly applied to A port

#### Confirmation of allowable kinetic energy

Confirm the internal stopper strength at extension and retraction ends in the graph on page 1354.



REA

**REB** 

REC  $C \square Y$ 

C $\square$ X

MQ

RHC

RZQ



#### **Pneumatic Circuit Adjustment**

#### Regulator set pressure


Set the pressures of circuit [A] and circuit [C] regulators at values found by the formula in the following table.

Circuit	Orientation	Bore size (mm)	P2 [MPa]
Α	Horizontal	-	0.75P1
		32	0.75P1-0.012m
Α	Down	40	0.75P1-0.0078m
A	Down	50	0.75P1-0.0050m
		63	0.75P1-0.0031m
		32	1.5P1-0.024m
		40	1.5P1-0.016m
C	Up	50	1.5P1-0.010m
		63	1.5P1-0.0063m

- P1: Operating pressure [MPa], m: Load mass [kg]
- ∗ In cases with load fluctuations, substitute the median value of the mass. Example) Assume circuit [C] with an operating pressure of 0.5 MPa, load mass of 10 kg, fluctuation to 20 kg and a cylinder bore of 32 mm. → P2 = 1.5 x 0.5 · 0.024 x 15 = 0.39 MPa
- When restarting the regulator after leaving unused for a long period of time, starting pressure increases because rubber sticks to it. Applying the same pressure to P1 and P2 is recommended when restarting.

#### Speed adjustment

The data below illustrates the strokes controlled by the respective speed controllers. Gradually increase from a low speed to the desired speed setting.

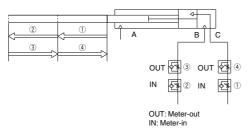


#### Overrun at intermediate stop

When stopping at an intermediate point, the cylinder first moves the piston past the intermediate point and then returns it. To confirm this distance of an extra travel (overrun) in Graph  $\[ \]$ , Lines  $\[ \]$  to  $\[ \]$  can be selected from the following table.

Circuit	Orientation	Movement	Line
Α	Horizontal	Extension	3
A	Horizoniai	Retraction	4
Α	Down	Extension	3
A	Down	Retraction	3
В	Up	Extension	1
Е	Ор	Retraction	3
С	Up	Extension	2
ט	Ор	Retraction	4


\* The above values are for cases where the maximum load mass found by the selection method is loaded.

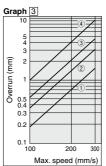

#### Change of the return point at the time of power failure

At the time of power failure, circuits  $\triangle$  to  $\bigcirc$  return the piston to the retraction end.

To return the piston to the intermediate point at the time of power failure, add changes to the 3 port valve (Valve 2) on the cylinder rear side so that it will be normally open. To return the piston to the extension end at the time of power failure, add changes to both 3 port valves so that they will be normally open.

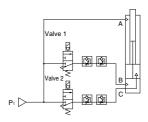


Return to the retraction end when power supply is stopped Valve 1: Normally closed, Valve 2: Normally closed

Return to the intermediate position when power supply is stopped


Valve 1: Normally closed, Valve 2: Normally open
Return to the extension end when power supply is stopped
Valve 1: Normally open, Valve 2: Normally open

#### Change to motion holding circuit

To hold the present motion at the time of power failure instead of performing a return to the specified stop point, change both 3 port valves to 5 port double valves and plug A or B port, whichever is open.

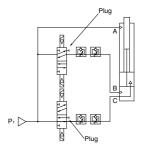

#### Construction

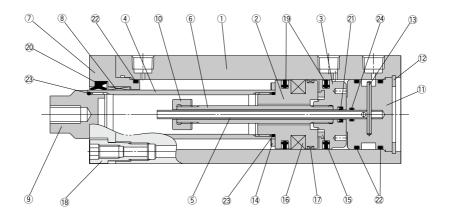

#### **Component Parts**

	Description	Material	Note
1	Cylinder tube	Aluminum alloy	Hard anodized
2	Piston A	Aluminum alloy	Chromated
3	Piston B	Aluminum alloy	Chromated
4	Tube rod	Carbon steel	Hard chrome plated
5	Inner pipe	Stainless steel	
6	Outer pipe	Carbon steel	Zinc chromated
7	Rod cover	Aluminum alloy	White hard anodized
8	Bushing	Special friction lining	
9	Tube rod cover	Carbon steel	Electroless nickel plated
10	Nut	Carbon steel	Zinc chromated
11	Head cover	Aluminum alloy	Chromated
12	Retaining ring	Carbon tool steel	Phosphate coated

	Description	Material	Note
13	Parallel pin	Carbon steel	
14	Bumper A	Polyurethane	
15	Bumper B	Polyurethane	
16	Magnet	_	
17	Wear ring	Resin	
18	Fitting bolt	Carbon steel	Nickel plated
19	Piston seal	NBR	
20	Rod seal A	NBR	
21	Rod seal B	NBR	
22	Gasket A	NBR	
23	Gasket B	NBR	
24	Gasket C	NBR	

#### Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
32	RZQ32-PS	
40	RZQ40-PS	A set of Nos. (9, 20, 2), 22 and 24 from the table above
50	RZQ50-PS	A set of Nos. (3, 20, 2), 22 and 24 from the table above
63	RZQ63-PS	

\* Seal kits are sets consisting of litems (§, ②, ②, ② and ② and can be ordered using the seal kit number for each cylinder bore size. 
\* Since the seal kit does not include a grease pack, order it separately.

Grease pack part no. GR-L-010 (10 g)

D-□


REA REB REC |C□Y C□X MQ

RHC **RZQ** 


**SMC** 


# Series RZQ

#### **Dimensions**

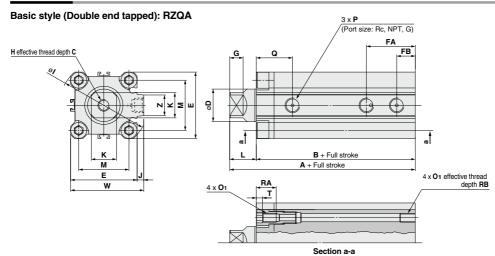

#### Basic style (Through-hole): RZQB

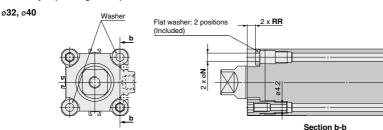

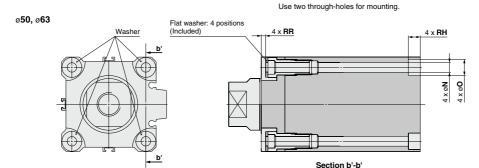

Use f	our thro	ough-hole:	s for	mountin	g.

2 x **RH** 


2 × Ø


(mm)

Bore s (mm		A	В	С	D	E	FA	FB	G	н	ı	J	ĸ	L	М	N	<b>O</b> 1	o	Р	Q	RA	RB	RR	RH	т	w	z
32	2	100.5	82.5	14	22.4	45	33	12.5	9	M8 x 1.25	60	4.5	17	18	34	5.5	M6 x 1.0	9	Rc 1/8	24.5	14	10	5.5	7	4.5	49.5	14
40	)	110	92	16	28	52	35	14	9	M10 x 1.5	69	5	24	18	40	5.5	M6 x 1.0	9	Rc 1/8	26	14	10	5.5	7	4.5	57	14
50	)	118.5	96.5	16	35	64	37	14	12	M10 x 1.5	86	7	30	22	50	6.6	M8 x 1.25	11	Rc 1/4	30	17	14	3	8	5.5	71	19
63	3	130	102	21	45	77	39.5	16.5	15	M16 x 2.0	103	7	36	28	60	9	M10 x 1.5	14	Rc 1/4	36.5	21.5	18	4.5	10.5	6.5	84	19

# 3 Position Cylinder Series RZQ


#### Foot style: RZQL

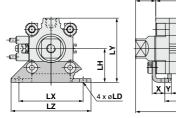


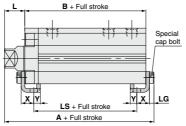

Foot Style	е						(mm)
Bore size (mm)	A	В	L	LD	LG	LH	LS
32	107.7	82.5	18	6.6	4	30	66.5
40	117.2	92	18	6.6	4	33	76
50	126.7	96.5	22	9	5	39	73.5
63	138.2	102	28	11	5	46	76
Bore size (mm)	LX	LY	LZ	х	Υ		
32	57	57	71	11.2	5.8		
40	64	64	78	11.2	7		
50	79	78	95	14.7	8		
63	95	91.5	113	16.2	9		

#### Rod side flange style: RZQF

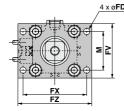

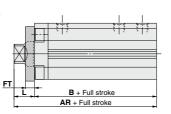


# Head side flange style: RZQG 4 x o FD 4 x o FD 4 x o FD 4 x o FD 5 x o FD 6 x o FD 7 x o FD 8 x o FD

Flange St	yle						mm
Bore size (mm)	AR	АН	В	FD	FT	FV	FX
32	100.5	108.5	82.5	5.5	8	50	56
40	110	118	92	5.5	8	56	62
50	118.5	127.5	96.5	6.6	9	67	76
63	130	139	102	9	9	90	92

Bore size (mm)	FZ	L	М
32	65	18	34
40	72	18	40
50	90	22	50
63	108	28	60

#### Double clevis style: RZQD

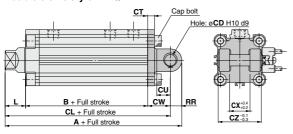

Double Clevis Style (mm								
Bore size (mm)	A	В	CD	CL	СТ	cu	cw	
32	130.5	82.5	10	120.5	5	14	20	
40	142	92	10	132	6	14	22	
50	160.5	96.5	14	146.5	7	20	28	
63	174	102	14	160	8	20	30	

Bore size (mm)	сх	cz	L	RR
32	18	36	18	10
40	18	36	18	10
50	22	44	22	14
63	22	44	28	14

U			
2			
В			
0			

D-□ -X□

REA REB REC

|C□Y

C□X MQ

RHC

**RZQ** 

# Series RZQ

# **Auto Switch Mounting 1**

#### **Minimum Auto Switch Mounting Stroke**

(mn

ı	Number of auto switches	D-M9□V D-F7□V D-J79C	D-A9□V D-A80 D-A73C D-A80C	D-A9□	D-M9□WV D-M9□AV D-F7□WV D-F7BAV	D-A7□H D-A80H	D-M9□ D-F7□ D-J79	D-M9□W D-M9□A	D-A79W	D-F9BA D-F7□W D-J79W D-F7BA D-F79F D-F7NT	D-P4DW
1 pc.	Full stroke	5	5	10(5)	10	15(5)	15(5)	15(10)	15	20(10)	15
2 pcs.	Full stroke	5	10	10	15	15(10)	15(5)	15	20	20(15)	15
2 000	First-stage stroke	5	10	10	15	10	15		20	15	15
3 pcs.	Full stroke – First-stage stroke	5	10	10	15	10	15		20	15	15

Note ) The dimension stated in ( ) shows the minimum stroke for the auto switch mounting when the auto switch does not project from the end surface of the cylinder body and hinder the lead wire bending space. (Refer to the figure below.)

The auto switch and auto switch mounting bracket are ordered separately.



#### Auto Switch Proper Mounting Position (Detection of Piston A Stop Position) and Its Mounting Height


When mounting on the same surface:

Cylinder bore size: ø32 to ø63

3 auto switches can be mounted on the same surface when the full stroke is 75 mm or longer. 2 auto switches can be mounted on the same surface when the full stroke is less than 75 mm.





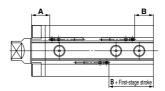


When mounting on different surfaces:







Auto switches can be mounted on different surfaces when the cylinder bore size is  $\emptyset 63$ .

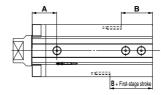


D-A7□ D-F7NT **D-A80** D-F7BA D-A7□H **D-A73C** D-A80H D-A80C D-J79C D-F7□ D-J79 **D-A79W** D-F7 WV D-F7□W D-J79W D-F7□V D-F79F D-F7BAV

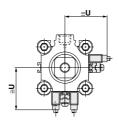

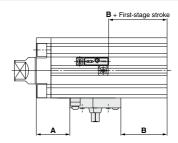

#### Auto Switch Proper Mounting Position (Detection of Piston A Stop Position) and Its Mounting Height

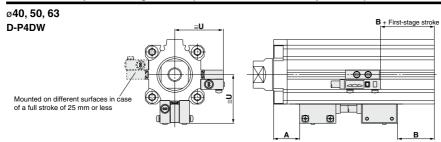

\* The values in the table below should be used as a reference for the auto switch mounting position at the stroke end detection. Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto switch model	D-A D-A	9□ 9□V	D-M9 D-M9 D-M9 D-M9 D-M9 D-M9	□V □W □WV □A		A73 A80	D-A72/A D-A80H/ D-A80C/ D-J79W/ D-J79C/I D-F7□W D-F7BA	A73C F7□/J79 F7□V F7□W V/F7BA	D-F	7NT	D-A	79W	D-P4	łDW
size	Α	В	A	В	Α	В	Α	В	Α	В	Α	В	Α	В
32	26	36.5	30	40.5	27	37.5	27.5	38	32.5	43	24.5	35	_	_
40	30	42	34	46	31	43	31.5	43.5	36.5	48.5	28.5	40.5	27	39
50	32.5	43	36.5	47	33.5	44	34	44.5	39	49.5	31	41.5	29.5	40
63	36	46	40	50	37	47	37.5	47.5	42.5	52.5	34.5	44.5	33	43

**Auto Switch Mounting Height** 

Auto switch model	D-A9□V	D-M9□V D-M9□WV D-M9□AV	D-A7□ D-A80	D-A7 H D-A80H D-F7 -   /F7 -   F D-J79/J79W D-F7 -   W D-F7BA D-F7NT	D-A73C D-A80C	D-F7□V D-F7□WV D-F7BAV	D-J79C	D-A79W	D-P4DW
size	U	U	U	U	U	U	U	U	U
32	27	29	31.5	32.5	38.5	35	38	34	_
40	30.5	32.5	35	36	42	38.5	41.5	37.5	44
50	36.5	38.5	41	42	48	44.5	47.5	43.5	50
63	40	42	47.5	48.5	54.5	51	54	50	56.5

#### **Operating Range**

				(mm)					
Auto switch model		Bore size							
Auto switch model	32	40	50	63					
D-A9□ (V)	9.5	9.5	9.5	11.5					
D-M9□ (V) D-M9□W (V) D-M9□A (V)	6	5.5	6	6.5					
D-A7□ (H) (C) D-A80□ (H) (C)	12	11	10	12					
D-A79W	13	14	14	16					
D-F7□ (V) D-J79 (C) D-F7□W (V) D-F7BA (V) D-F7NT D-F79F	6	6	6	6.5					
D-P4DW	_	5	5	5					

 $* \ Since the operating range is provided as a guideline including hysteresis, it cannot be guaranteed (assuming$ 

approximately ±30% dispersion). It may vary substantially depending on an ambient environment.

\* The values above for a bore size over ø32 of D-A9 (V)/M9 (V)/M9 (V)/M9 (V) types are measured

REA REB

(mm)

REC

C□Y

C□X MQ

RHC

RZQ






<sup>\*</sup> The values above for a bore size over 632 of D-A9LL (V)/M9LLW (V)/M9LW (V)/M9A (V) types are measured when the conventional switch installation groove is attached without using the auto switch mounting bracket R02.012

## Series RZQ

# **Auto Switch Mounting 2**

#### Auto Switch Mounting Bracket: Part No.

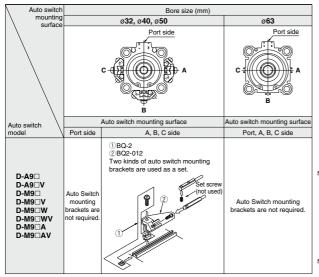

Note 1) When a compact auto switch is mounted on the three sides (A, B and C above) other than the port side of bore sizes ø32 to ø50, the auto switch mounting brackets above are required. Order them separately from cylinders.

(It is the same as when mounting compact cylinders with an auto switch mounting rail, but not with ø63 compact auto switch installation groove.) Ordering example

RZQA32-200-100-M9BW-----1 unit

BQ-2----2 pcs. BQ2-012----2 pcs.

Note 2) Auto switch brackets and auto switches are shipped together with cylinders.

Auto switch model	Bore size (mm)					
Auto Switch model	32	40	50	63		
D-A7□/A80 D-A73C/A80C D-A7□H/A80H D-A79W D-F7□J/J79 D-F7□W/J79W D-F7□W/J79W D-F7□WV D-F7□F7□NV D-F7□F7FA/F7BA/F7BA/F7BA/F7FA/F7FA/F7BA/F7BA/		ВС	<b>)-2</b>			
D-P4DWL	_		BQP1-050			

Note 3) Auto switch mounting brackets and auto switches are shipped together with cylinders. However, ø40 to ø63 of D-P4DW type are assembled at the time of shipment.

#### [Mounting screw set made of stainless steel]

The following set of mounting screws made of stainless steel (including nuts) is available. Use it in accordance with the operating environment. (Please order BQ-2 separately, since the auto switch spacer (for BQ-2) is not included.)

BBA2: For D-A7/A8/F7/J7 types

Water resistant auto switch, D- F7BA is set on the cylinder with the stainless steel screws above when shipped. When an auto switch is shipped independently, BBA2 is attached.

Note 4) Refer to page 1993 for the details of BBA2.

Note 5) When mounting D-M9□A (V) on a port other than the ports for ø32, ø40 and ø50, order auto switch mounting brackets BQ2-012S, BQ-2 and stainless steel screw set BBA2 separately.

#### Auto Switch Mounting Bracket Weight

Auto switch mounting bracket part no.	Weight (g)
BQ-2	1.5
BQ2-012	5
BQP1-050	16

Other than the applicable auto switches listed in "How to Order" the following auto switches can be mounted. For detailed specifications, refer to pages 1893 to 2007.

Auto switch type	Part No.	Electrical entry	Features
	D-A73	6	_
Reed	D-A80	Grommet (perpendicular)	Without indicator light
	D-A73H, A76H	Grommet (in-line)	_
	D-A80H	Groniner (in-line)	Without indicator light
	D-F7NV, F7PV, F7BV		_
	D-F7NWV, F7BWV	Grommet (perpendicular)	Diagnostic indication (2-color indication)
	D-F7BAV		Water resistant (2-color indication)
Solid state	D-F79, F7P, J79		_
Solid state	D-F79W, F7PW, J79W		Diagnostic indication (2-color indication)
	D-F7BA	Grommet (in-line)	Water resistant (2-color indication)
	D-F7NT		With timer
	D-P5DW		Magnetic field resistant (2-color indication)

For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1960 and 1961 for details